Home (/sg/en/) / Drives (/sg/en/Drives/c/3000) /
Low Voltage Drives (/sg/en/Drives/Low-Voltage-Drives/c/3301) /
VLT® Midi Drive FC 280 (/sg/en/Drives/Low-Voltage-Drives/VLT%C2%AE-Midi-Drive-FC-280/c/7559) / 134U7768

> Export page (/sg/en/Drives/Low-Voltage-Drives/VLT%C2%AE-Midi-Drive-FC-280/FC-280PK37T4E20H2BXCXXXSXXXXAL/p/134U7768/getExport)



Larger View

FC-280PK37T4E20H2BXCXXXSXXXXAL

134U7768

FC-280PK37T4E20H2BXCXXXSXXXXAL

Frequency converter

FC-280PK37T4E20H2BXCXXXSXXXXAL

VLT® Midi Drive FC-280

0.37 kW / 0.50 HP, Three phase 380-480 VAC

IP20 / Chassis, EMC Cat C3 (200/400V)

Brake chopper, No display

Coated PCB, Latest release

Integrated PROFINET

Frame: K1

Other options according to Model code

Model code: FC-280PK37T4E20H2BXCXXXSXXXXAL

Note: The FC 280 does not include an LCP display or Memory Module. The LCP and the Memory Module can be ordered as an Accessory. Note: Mounting adapter plates for VLT2800 are available as an Accessory.

Read less



Re-configure (/sg/en/134U7768/configuratorPage/CPQCONFIGURATOR)

+ Add to comparison list

| Product details | Documents | Certificates | Visuals | Accessories | Spare Parts | Services |
|--------------------|-----------|--------------|-----------|-------------------|-------------|----------|
| Product detai | ils | | | | | |
| Gross weight | | | 3.05 kg | | | |
| Net weight | | | 2.62 kg | | | |
| Volume | | | 16.53 l | | | |
| EAN | | | 571010803 | 8205 | | |
| VLT® Midi Drive FO | 280 | | | | | |
| Product View (Swi | tch) | GLBI | - | Global (Standard |)) | |
| Product Group | | FC- | | VLT® Midi Drive F | :C- | |
| Series | | 280 | | 280 | | |
| Power Size | | PK37 | , | 0.37 kW / 0.50 HF |) | |
| Voltage | | T4 | | Three phase 380 | -480 VAC | |
| Enclosure | | E20 | | IP20 / Chassis | | |
| RFI Filter | | H2 | | EMC Cat C3 (200, | /400V) | |
| Brake & Stop | | В | | Brake chopper | | |
| Display | | X | | No display | | |
| Coating | | С | | Coated PCB | | |
| Mains Option | | X | | No mains option | s | |
| Adaptation A | | Х | | No Adaption | | |
| Adaptation B | | Х | | No Adaption | | |
| Special Version | | SXX | (| Latest release | | |

| Software Language Pack | X | Standard language pack |
|-------------------------------|---------|-------------------------|
| Control Card | AL | Integrated PROFINET |
| Frame Size | K1 | K1 |
| Typecode Part 1 | | FC-280PK37T4E20H2BXC |
| Typecode Part 2 | | XXXSXXXXAL |
| Product Catalog | NO_VIEW | NO VIEW |
| Calculated Gross Weight [kg] | | 2.8 |
| Calculated Net Weight [kg] | | 2.5 |
| Intermittent Current (HO) [A] | | 1.9 |
| Intermittent Current (HO) [A] | | 1.9 |
| Continuous Current (HO) [A] | | 1.2 |
| Continuous Current (HO) [A] | | 1.1 |
| Power Loss HO [W] | | 20.9 |
| kVA | | 0.9 |
| Power 160% (HO) [KW] | | 0.37 |
| Height [mm] | | 210 |
| Width w/ no C options [mm] | | 75 |
| Depth [mm] | | 168 |
| Vendor | ERR01 | Cannot Determine Vendor |
| Recommended Factory | ERR01 | Cannot Determine Vendor |
| Modelcode01 | | FC-280PK37T4E20H2BXC |
| Modelcode02 | | XXXSXXXXAL |
| ECCN EU | | Y901 |
| ECCN US | | 3A999.a |
| Recommended Plant | | ERR01 |
| | | |

Documents

| Documen | Singapore | English | Title | |
|-----------------------|-----------|---------|--|-------|
| Application guide | Singapore | English | Encoder-less Safety using DOLD Module (//assets.danfoss.com/documents/273085/AB361177609013en- 000101.pdf) AB361177609013en-000101 6057 KB | (//as |
| Brochure | Singapore | English | VLT® Midi Drive FC 280 Selection Guide (//assets.danfoss.com/documents/316954/AD396854554545en- 010201.pdf) AD396854554545en-010201 20648 KB | (//as |
| Design guide | Singapore | English | DrivePro® Retrofit VLT® 2800 to VLT® Midi Drive FC 280 (//assets.danfoss.com/documents/366700/AJ440051329024en-000102.pdf) AJ440051329024en-000102 6300 KB | (//a: |
| Design guide | Singapore | English | VLT® Midi Drive FC 280 (//assets.danfoss.com/documents/272336/AJ275647019268en- 000501.pdf) AJ275647019268en-000501 16912 KB | (//a: |
| Installation guide | Singapore | English | Blind Cover (//assets.danfoss.com/documents/276969/AN361179838393en- 000201.pdf) AN361179838393en-000201 187 KB | (//as |
| Installation guide | Singapore | English | Bus Decoupling Kit (//assets.danfoss.com/documents/276710/AN361179829411en- 000101.pdf) AN361179829411en-000101 322 KB | (//as |
| Installation guide | Singapore | English | Control Cassettes Installation Guide (//assets.danfoss.com/documents/273279/AN424547088970en-000401.pdf) AN424547088970en-000401 721 KB | (//as |
| Installation guide | Singapore | English | Fan Replacement (//assets.danfoss.com/documents/274396/AN446158027410en- 000101.pdf) AN446158027410en-000101 293 KB | (//as |

| | | | Title | |
|-----------------------|-----------|---------|--|-------|
| Installation guide | Singapore | English | Graphical LCP Adapter (//assets.danfoss.com/documents/276940/AN361179836395en- 000201.pdf) AN361179836395en-000201 180 KB | (//as |
| Installation guide | Singapore | English | Memory Module Programmer (//assets.danfoss.com/documents/277145/AN361179851415en- 000101.pdf) AN361179851415en-000101 133 KB | (//as |

View:

10 (/sg/en/setDocumentsPage?

product Code = 134U7768 & document Certificate Type = Danfoss Document & page = 0 & page Size = 10)

25 (/sg/en/setDocumentsPage?

product Code = 134U7768 & document Certificate Type = Danfoss Document & page = 0 & page Size = 25)

50 (/sg/en/setDocumentsPage?

product Code = 134U7768 & document Certificate Type = Danfoss Document & page = 0 & page Size = 50)

⟨уsg/en/setDocumentsPage?

product Code = 134U7768 & document Certificate Type = Danfoss Document & page = 0 & page Size = 10)

1/3

(/sg/en/setDocumentsPage?

product Code = 134U7768 & document Certificate Type = Danfoss Document & page = 1 & page Size = 10)

Certificates

| Document Type | Singapore | English | Title | |
|-------------------------|-----------|---------|---|--------|
| EU-UK Declaration | Singapore | English | Danfoss EU-UK 00728753 A14 (//assets.danfoss.com/approvals/208046/ID365934718350- 0301.pdf) ID365934718350-0301 2341 KB | (//ass |
| EU-UK Declaration | Singapore | English | Danfoss EU-UK 00738276 A4 (//assets.danfoss.com/approvals/201538/ID383146070796- 0201.pdf) ID383146070796-0201 2174 KB | (//ass |
| Fieldbus Certificate | Singapore | English | PROFIBUS Z11394 (//assets.danfoss.com/approvals/196656/ID375733660132- 0201.pdf) ID375733660132-0201 81 KB | (//ass |

| | | | Title | |
|-------------------------------------|-----------|---------|--|--------|
| Fieldbus Certificate | Singapore | English | PROFIBUS Z20309 (//assets.danfoss.com/approvals/196657/ID404448467481- 0101.pdf) ID404448467481-0101 76 KB | (//ass |
| Functional Safety Certificate | Singapore | English | TÜV 968 FSP 1217 03 20 (//assets.danfoss.com/approvals/220708/ID365930056154- 0201.pdf) ID365930056154-0201 678 KB | (//ass |
| Functional Safety Certificate | Singapore | English | TÜV 968_FSP_1217_04_22 (//assets.danfoss.com/approvals/220709/ID436042623261- 0101.pdf) ID436042623261-0101 678 KB | (//ass |
| Manufacturer's Declaration | Singapore | English | Danfoss MD 00723827 A1 (//assets.danfoss.com/approvals/158886/ID365946753660- 0101.pdf) ID365946753660-0101 841 KB | (//ass |
| Manufacturer's Declaration | Singapore | English | Danfoss MD 00729876 A4 (//assets.danfoss.com/approvals/158887/ID365946754661- 0101.pdf) ID365946754661-0101 874 KB | (//ass |
| Manufacturer's Declaration | Singapore | English | Danfoss MD 00732787 A1 (//assets.danfoss.com/approvals/158892/ID365946766670- 0101.pdf) ID365946766670-0101 413 KB | (//ass |

Visuals

| Visuals | Document Category | Title | Download |
|-----------------------|-----------------------------------|---|--|
| 2 | Product part or accessories photo | FC280_K1 | > K1_NoBlind.jpg (//assets.danfoss.com/photos/262649/ID43373258964 0101.jpg) |
| No image available | Dimensional drawing | MCAD MCC107 EMC filter K1T4 134B5463 | > MCAD MCC107 EMC filter K1T4 134B5463.STP (//assets.danfoss.com/drawings/281191/ID362147429 0101.stp) |

| Visuals | Document Category | Title | Download |
|-----------------------|---------------------|-------------------------------------|--|
| | Circuit diagram | Wiring Schematic FC 280 | > e30be202.pdf (//assets.danfoss.com/drawings/278534/ID264335367 0101.pdf) |
| No image available | Dimensional drawing | MCAD GLCP Adapter 132B0281 | > MCAD GLCP Adapter 132B0281.stp (//assets.danfoss.com/drawings/281208/ID362147427 0101.stp) |
| | Dimensional drawing | MCAD FC 280 K1 Installation | > FC280-K1-Installation.pdf (//assets.danfoss.com/drawings/267575/ID362147716 0101.pdf) > MCAD FC 280 K1 Installation.stp (//assets.danfoss.com/drawings/267572/ID362147716 0101.stp) > fc280-k1-installation.dxf (//assets.danfoss.com/drawings/267573/ID362147716 0101.dxf) |
| | Dimensional drawing | MCAD VLT Blind Cover FC280 FC360 | MCAD VLT Blind Cover FC280_FC360.pdf (//assets.danfoss.com/drawings/279468/ID362147513 0101.pdf) MCAD VLT Blind Cover FC280_FC360.stp (//assets.danfoss.com/drawings/266603/ID362147513 0101.stp) MCAD VLT Blind Cover FC280_FC360.dxf (//assets.danfoss.com/drawings/269629/ID362147513 0101.dxf) |
| No image available | Eplan drawing | FC- 280PK37T4E20H2BXCXXXSXXXXAL | > FC-280PK37T4E20H2BXCXXXSXXXXAL.zip (//assets.danfoss.com/drawings/265739/ID362148468 0101.zip) |
| | Dimensional drawing | MCAD Frame 1 adapter 132B0363 | > MCAD Frame 1 adapter 132B0363.pdf (//assets.danfoss.com/drawings/281167/ID362147431 0101.pdf) |
| No image available | Eplan drawing | 132B0254_Eplan | > 132B0254_Eplan.zip (//assets.danfoss.com/drawings/437139/ID362147871 0201.zip) |

| Visuals | Document Category | Title | Download |
|---------|---------------------|-------------------------------|--|
| | Dimensional drawing | MCAD VLT Control Panel LCP 21 | > MCAD VLT Control Panel LCP 21.pdf |
| | | | (//assets.danfoss.com/drawings/269641/ID362147513 |
| | | | 0101.pdf) |
| | | | MCAD VLT Control Panel LCP 21.stp |
| 2 2 | | | (//assets.danfoss.com/drawings/269638/ID362147513 |
| | | | 0101.stp) > MCAD VLT Control Panel LCP 21.dxf |
| | | | • |
| | | | (//assets.danfoss.com/drawings/279472/ID362147513 0101.dxf) |

Accessories

Search for specific accessories

Filter accessories Show All > Reset



/Low-Voltage-

Drives/Access

ories-for-Low-

Voltage-

Drives/Access

ories-FC-

280/LCP-

Blind-

cover%2C-

IP20-

21/p/132B026

2)

132B0262

> LCP Blind cover, IP20/21

 $\label{lem:cover} (/sg/en/Drives/Low-Voltage-Drives/Accessories-FC-280/LCP-Blind-cover% 2C-IP 20-21/p/132B0262)$

Use the blind cover to mount on a VLT $^{\!\!\!\circ}$ Midi Drive FC 280 when you does not need a control panel.

Where to buy

+ Add to comparison list



/Low-Voltage-

Drives/Access

ories-for-Low-

Voltage-

Drives/Access

ories-FC-

280/VLT%C2%

AE-Control-

Panel-LCP-

21%2C-

numeric/p/13

2B0254)

132B0254

> VLT® Control Panel LCP 21, numeric

 $\label{lem:control} (/sg/en/Drives/Low-Voltage-Drives/Accessories-FC-280/VLT\%C2\%AE-Control-Panel-LCP-21\%2C-numeric/p/132B0254)$

VLT® Control Panel LCP 21 Numerical

Where to buy

+ Add to comparison list



/Low-Voltage-

Drives/Access

ories-for-Low-

Voltage-

Drives/Access

ories-FC-

51/LCP-

Remote-

Mounting-

Kit%2Cw-3m-

cable/p/132B

0102)

132B0102

> LCP Remote Mounting Kit,w/ 3m cable

 $\label{lem:continuous} (/sg/en/Drives/Low-Voltage-Drives/Accessories-FC-51/LCP-Remote-Drives/Accesso$

Remote installation kit for VLT Micro Drive FC 51 for installing an LCP

11 or LCP

12 control unit in a control cabinet door or similar. (can also be retrofitted).

Contains fastening elements, seal and 3 m connection cable with plugs.

LCP is not included in the scope of delivery.

Where to buy

+ Add to comparison list



/Low-Voltage-

Drives/Access

ories-for-Low-

Voltage-

Drives/Access

ories-FC-

280/VLT%C2%

AE-24-V-DC-

Supply-MCB-

106/p/132B03

68)

132B0368

> VLT® 24 V DC Supply MCB 106

 $\label{lem:converse} (/sg/en/Drives/Low-Voltage-Drives/Accessories-FC-280/VLT\%C2\%AE-24-V-DC-Supply-MCB-106/p/132B0368)$

VLT® 24 V DC Supply MCB 106 for FC-280

Where to buy

+ Add to comparison list



(/sg/en/Drives /Low-Voltage-Drives/Access ories-for-Low-Voltage-Drives/Access ories-FC-280/Adapter-Plate%2C-

VLT2800-size-B/p/132B0364

)

132B0364

> Adapter Plate, VLT2800 size B

 $\label{lem:continuous} (/sg/en/Drives/Low-Voltage-Drives/Accessories-FC-280/Adapter-Plate% 2 C-VLT 2800-size-B/p/132B0364)$

Adapter plate, VLT2800 size B VLT 2822 200-240 volts VLT 2822-2840 380-480 volts

Where to buy

+ Add to comparison list



/Low-Voltage-

Drives/Access

ories-for-Low-

Voltage-

Drives/Access

ories-FC-

280/Adapter-

Plate%2C-

VLT2800-size-

A/p/132B0363

)

132B0363

> Adapter Plate, VLT2800 size A

 $\label{lem:continuous} (/sg/en/Drives/Low-Voltage-Drives/Accessories-FC-280/Adapter-Plate%2C-VLT2800-size-A/p/132B0363)$

Adapter Plate, VLT2800 size A VLT 2803-2815 200-240 Volt VLT 2805-2815 380-480 Volt

Where to buy

+ Add to comparison list



/Low-Voltage-

Drives/Access

ories-for-Low-

Voltage-

Drives/Access

ories-FC-

280/Adaptor

%2C-

Graphical-

LCP/p/132B02

81)

132B0281

> Adaptor, Graphical LCP

 $\label{lem:continuous} (/sg/en/Drives/Low-Voltage-Drives/Accessories-FC-280/Adaptor\%2C-Graphical-LCP/p/132B0281)$

Graphic LCP adapter for LCP102

Where to buy

+ Add to comparison list



/Low-Voltage-

Drives/Access

ories-for-Low-

Voltage-

Drives/Access

ories-FC-

280/IP21-

Type-1-

conversion-

kit%2C-

K1/p/132B033

5)

132B0335

> IP21 / Type 1 conversion kit, K1

 $\label{lem:conversion} (/sg/en/Drives/Low-Voltage-Drives/Accessories-FC-280/IP21-Type-1-conversion-kit% 2C-K1/p/132B0335)$

IP21 / Type 1 conversion kit, K1

Where to buy

+ Add to comparison list



(/sg/en/Acces sories-FCM-106/VLT%C2%

AE-Memory-

Module-

Programmer-

MCM-

101/p/134B07

92)

134B0792

> VLT® Memory Module Programmer MCM 101

(/sg/en/Accessories-FCM-106/VLT%C2%AE-Memory-Module-Programmer-MCM-101/p/134B0792)

Where to buy

+ Add to comparison list

+Add to My Product List

Spare Parts

| Search | for | specific s | naro | narts |
|--------|-----|------------|------|-------|
| Searcn | 101 | specific s | pare | parts |

| Select Refinements | |
|--------------------|---------------------|
| DrivePro Category | Spare Part Category |
| | |

> Reset all refiners



(/sg/en/Buscabledecouplingkit%2C-FC-280/p/132B03 69)

132B0369

> Bus cable decoupling kit, FC-280

(/sg/en/Bus-cable-decoupling-kit%2C-FC-280/p/132B0369)

Where to buy

+ Add to comparison list

+Add to My Product List



(/sg/en/Termi nal-Coverframe-size-K1/p/132B035 4)

132B0354

> Terminal Cover frame size K1

(/sg/en/Terminal-Cover-frame-size-K1/p/132B0354)

Where to buy

+ Add to comparison list



(/sg/en/Acces sory-bag-FC-280plugs/p/132B 0350) 132B0350

> Accessory bag FC-280 plugs

(/sg/en/Accessory-bag-FC-280-plugs/p/132B0350)

Accessory bag FC-280 plugs

Where to buy

+ Add to comparison list

+Add to My Product List



(/sg/en/VLT%

C2%AE-

Cassette-

control---

ProfiNet/p/13

2B0348)

132B0348

> VLT® Cassette control - ProfiNet

(/sg/en/VLT%C2%AE-Cassette-control---ProfiNet/p/132B0348)

VLT® Cassette control - ProfiNet

Where to buy

+ Add to comparison list



/DrivePro%C2

%AE-

Services/Exch

ange-

Units/FC-

280P1K1T4E2

0H2BXCXXXS

XXXXAL/p/13

4U7771)

134U7771

> FC-280P1K1T4E20H2BXCXXXSXXXXAL

(/sg/en/Drives/DrivePro%C2%AE-Services/Exchange-Units/FC-280P1K1T4E20H2BXCXXXSXXXXAL/p/134U7771)

FC-280P1K1T4E20H2BXCXXXSXXXXAL

Frequency converter

FC-280P1K1T4E20H2BXCXXXSXXXXAL

VLT® Midi Drive FC-280

1.1 kW / 1.5 HP, Three phase 380-480 VAC

IP20 / Chassis, EMC Cat C3 (200/400V)

Brake chopper, No display

Coated PCB, Latest release

Integrated PROFINET

Frame: K1

Other options according to Model code

Model code: FC-280P1K1T4E20H2BXCXXXSXXXXAL

Note: The FC 280 does not include an LCP display or Memory Module. The LCP and the Memory Module can be ordered as an Accessory.

Where to buy

Re-configure (/sg/en/134U7771/configuratorPage/CPQCONFIGURATOR)

+ Add to comparison list



/DrivePro%C2

%AE-

Services/Exte

nded-

Warranty/Driv

ePro-ExWarr-

Work-Shop-

PG01-36-

Month/p/130

R1102)

130R1102

> DrivePro ExWarr Work Shop PG01 36 Month

 $\label{lem:condition} $$(/sg/en/DrivePro\%C2\%AE-Services/Extended-Warranty/DrivePro-ExWarr-Work-Shop-PG01-36-Month/p/130R1102)$$

DrivePro® Standard Extended Warranty provides repair at a Danfoss Drivesworkshop, or shipment of a replacement product to the site. You can only order DrivePro® Extended Warranty when purchased with a new drive. For drives previously shipped or purchased; contact your local Danfoss Drives sales officefor extended warranty contract options

Where to buy

+ Add to comparison list



/DrivePro%C2

%AE-

Services/Exte

nded-

Warranty/Driv

ePro-ExWarr-

Work-Shop-

PG01-48-

Month/p/130

R1104)

130R1104

> DrivePro ExWarr Work Shop PG01 48 Month

 $\label{lem:condition} $$(/sg/en/DrivePro\%C2\%AE-Services/Extended-Warranty/DrivePro-ExWarr-Work-Shop-PG01-48-Month/p/130R1104)$$

DrivePro® Standard Extended Warranty provides repair at a Danfoss Drives workshop, or shipment of a replacement product to the site.

You can only order DrivePro® Extended Warranty when purchased with a new drive. For drives previously shipped or purchased; contact your local Danfoss Drives sales officefor extended warranty contract options.

Where to buy

+ Add to comparison list



/DrivePro%C2

%AE-

Services/Exte

nded-

Warranty/Driv

ePro-ExWarr-

Work-Shop-

PG01-42-

Month/p/130

R1103)

130R1103

> DrivePro ExWarr Work Shop PG01 42 Month

 $\label{lem:continuous} (/sg/en/DrivePro\%C2\%AE-Services/Extended-Warranty/DrivePro-ExWarr-Work-Shop-PG01-42-Month/p/130R1103)$

DrivePro® Standard Extended Warranty provides repair at a Danfoss Drives workshop, or shipment of a replacement product to the site.

You can only order DrivePro® Extended Warranty when purchased with a new drive. For drives previously shipped or purchased; contact your local Danfoss Drives sales officefor extended warranty contract options.

Where to buy

+ Add to comparison list



/DrivePro%C2

%AE-

Services/Exte

nded-

Warranty/Driv

ePro-ExWarr-

Work-Shop-

PG01-54-

Month/p/130

R1105)

130R1105

> DrivePro ExWarr Work Shop PG01 54 Month

 $\label{lem:continuous} (/sg/en/DrivePro\%C2\%AE-Services/Extended-Warranty/DrivePro-ExWarr-Work-Shop-PG01-54-Month/p/130R1105)$

DrivePro® Standard Extended Warranty provides repair at a Danfoss Drives workshop, or shipment of a replacement product to the site.

You can only order DrivePro® Extended Warranty when purchased with a new drive. For drives previously shipped or purchased; contact your local Danfoss Drives sales office for extended warranty contract options.

Where to buy

+ Add to comparison list



/DrivePro%C2

%AE-

Services/Exte

nded-

Warranty/Driv

ePro-ExWarr-

Work-Shop-

PG01-66-

Month/p/130

R1107)

130R1107

> DrivePro ExWarr Work Shop PG01 66 Month

 $\label{lem:continuous} (/sg/en/DrivePro\%C2\%AE-Services/Extended-Warranty/DrivePro-ExWarr-Work-Shop-PG01-66-Month/p/130R1107)$

DrivePro® Standard Extended Warranty provides repair at a Danfoss Drives workshop, or shipment of a replacement product to the site.

You can only order DrivePro® Extended Warranty when purchased with a new drive. For drives previously shipped or purchased; contact your local Danfoss Drives sales office for extended warranty contract options.

Where to buy

+ Add to comparison list



/DrivePro%C2

%AE-

Services/Exte

nded-

Warranty/Driv

ePro-ExWarr-

Work-Shop-

PG01-60-

Month/p/130

R1106)

130R1106

> DrivePro ExWarr Work Shop PG01 60 Month

 $\label{lem:condition} $$(/sg/en/DrivePro\%C2\%AE-Services/Extended-Warranty/DrivePro-ExWarr-Work-Shop-PG01-60-Month/p/130R1106)$$

DrivePro® Standard Extended Warranty provides repair at a Danfoss Drives workshop, or shipment of a replacement product to the site.

You can only order DrivePro® Extended Warranty when purchased with a new drive. For drives previously shipped or purchased; contact your local Danfoss Drives sales office for extended warranty contract options.

Where to buy

+ Add to comparison list



/DrivePro%C2

%AE-

Services/Exte

nded-

Warranty/Driv

ePro-ExWarr-

Work-Shop-

PG01-72-

Month/p/130

R1108)

130R1108

> DrivePro ExWarr Work Shop PG01 72 Month

 $\label{lem:condition} $$(/sg/en/DrivePro\%C2\%AE-Services/Extended-Warranty/DrivePro-ExWarr-Work-Shop-PG01-72-Month/p/130R1108)$$

DrivePro® Standard Extended Warranty provides repair at a Danfoss Drives workshop, or shipment of a replacement product to the site.

You can only order DrivePro® Extended Warranty when purchased with a new drive. For drives previously shipped or purchased; contact your local Danfoss Drives sales office for extended warranty contract options.

Where to buy

+ Add to comparison list



/DrivePro%C2

%AE-

Services/Exte

nded-

Warranty/Driv

ePro-ExWarr-

Work-Shop-

PG01-30-

Month/p/130

R1101)

130R1101

> DrivePro ExWarr Work Shop PG01 30 Month

 $\label{lem:condition} $$(/sg/en/DrivePro\%C2\%AE-Services/Extended-Warranty/DrivePro-ExWarr-Work-Shop-PG01-30-Month/p/130R1101)$$

DrivePro® Standard Extended Warranty provides repair at a Danfoss Drivesworkshop, or shipment of a replacement product to the site. You can only order DrivePro® Extended Warranty when purchased with a new drive. For drives previously shipped or purchased; contact your local Danfoss Drives sales officefor extended warranty contract options

Where to buy

+ Add to comparison list



/DrivePro%C2

%AE-

Services/Exte

nded-

Warranty/Driv

ePro-ExWarr-

Onsite-PG01-

48-

Months/p/130

R1004)

130R1004

> DrivePro ExWarr Onsite PG01 48 Months

 $\label{lem:condition} $$(/sg/en/DrivePro\%C2\%AE-Services/Extended-Warranty/DrivePro-ExWarr-Onsite-PG01-48-Months/p/130R1004)$$

DrivePro® On-site Extended Warranty provides repair at the customer site, or replacement at the customer site.

You can only order DrivePro® Extended Warranty when purchased with a new drive. For drives previously shipped or purchased; contact your local Danfoss Drives sales office for extended warranty contract options.

Where to buy

+ Add to comparison list

+Add to My Product List

View: 10 (/sg/en/referenceSearch?page=0&pageSize=10) 25 (/sg/en/referenceSearch?page=0&pageSize=25)

⟨(/sg/en/referenceSearch?page=0&pageSize=10) 1 / 2 **y**sg/en/referenceSearch?page=1&pageSize=10)

Software

Software and firmware to support existing functionality

| Software Type | Title | Version | Released | |
|------------------|--|---------|------------|------------|
| System | VLT® Midi Drive FC 280 Ethernet/IP EDS | 1.20 | 09/12/2016 | |
| software | (//assets.danfoss.com/software/283923/ID458721760898- 0101.zip) | | | (//assets. |
| | 5 KB | | | |

| | Title | Version | | |
|--------------------|--|----------------------|------------|------------|
| System software | VLT® Midi Drive FC 280 CANOpen EDS (//assets.danfoss.com/software/285985/ID461024314934- 0101.zip) 15 KB | 1.20 | 09/12/2016 | (//assets. |
| System software | VLT® Midi Drive FC 280 PROFIBUS GSD (//assets.danfoss.com/software/285987/ID461024898935- 0101.zip) 4 KB | 1.0 | 10/10/2016 | (//assets. |
| System software | VLT® Midi Drive Support File (//assets.danfoss.com/software/286113/ID461031958951- 0901.zip) 287 KB | 2.00 (late st) | 02/03/2022 | (//assets. |
| System software | VLT® Drives EtherNet/IP EDS (//assets.danfoss.com/software/297265/ID461838311590-0201.zip) 59 KB | 02 | 27/06/2016 | (//assets. |
| System software | VLT® Midi Drive FC 280 PROFINET GSDML (//assets.danfoss.com/software/311710/ID462345552876- 0101.zip) 14 KB | 01 | 30/10/2020 | (//assets. |
| Software tools | VLT® Motion Control Tool MCT31 (//assets.danfoss.com/software/317123/ID463107821219- 0101.zip) 25754 KB | 2.0.4 | 17/10/2017 | (//assets. |
| System software | VLT® EtherNet/IP Add-on Instructions (//assets.danfoss.com/software/317194/ID463138688276- 0101.zip) 442 KB | 01 | 27/09/2013 | (//assets. |
| System software | VLT® Midi Drive FC 280 POWERLINK XDD (//assets.danfoss.com/software/317288/ID463166045365- 0101.zip) 15 KB | 01 | 09/12/2016 | (//assets. |
| System software | VLT® MCA101 PROFIBUS GSD (//assets.danfoss.com/software/317290/ID463167260367- 0101.zip) 76 KB | 01 | 03/11/2010 | (//assets. |

View:

10 (/sg/en/setSoftwarePage?productCode=134U7768&page=0&pageSize=10) 25 (/sg/en/setSoftwarePage?productCode=134U7768&page=0&pageSize=25)

(/sg/en/setSoftwarePage?productCode=134U7768&page=0&pageSize=10) 1 / 2 (/sg/en/setSoftwarePage?productCode=134U7768&page=1&pageSize=10)

FAQs (/sg/en/faq) About us Find nearest distributor Contact us

(https://www.danfoss.com/en- (/sg/en/find-a- (https://www.danfoss.com/en-

sg/about-danfoss/) distributor) sg/contact-us/)

Terms of use (https://www.danfoss.com/en/terms/) Terms of use (https://www.danfoss.com/en-sg/terms/)
Privacy policy (/sg/en/privacy) General information (https://www.danfoss.com/en/terms/generalinformation/)

General information (https://www.danfoss.com/en-sg/terms/generalinformation/) Cookies

Configuration disclaimer (/sg/en/disclaimer_cpq)